


ATC LIFESTYLE QUICK START GUIDE

For a full description of the operation of your Lifestyle heater please refer to the main manual.

Controls

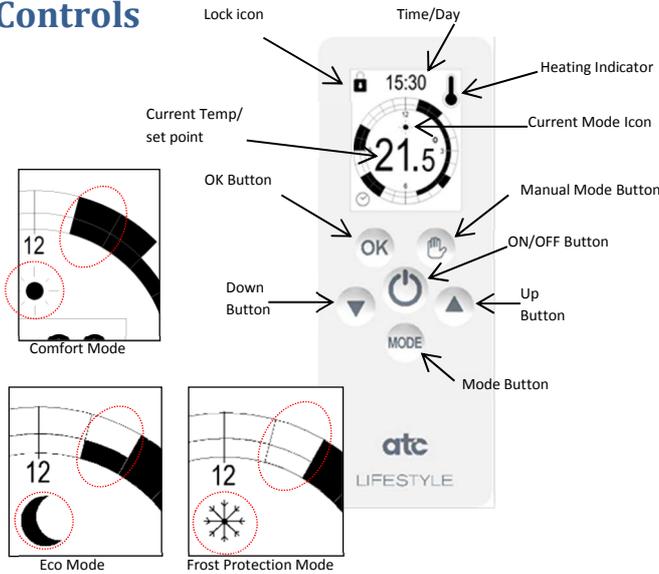

Easy Mode


Easy mode is designed to allow you to use the heater with just temperature control and ON/OFF. The heater can be set between 12°C and 30°C in 0.5°C steps. To access the easy mode, touch and hold the **OK** and **MODE** button together until you have the screen shown on the left. (Note: the numbers may be different.).

Touch **OK** to move to "Param.2" and then touch the up button to change 1P to 2P and touch **OK**. To exit easy mode enter the same menu and change 2P to 1P and touch **OK**.



The screen will change to show the current room temperature. You can now set the temperature required with the **▼** and **▲** keys and turn the heater on and off with the **ON/OFF** button. None of the other keys or functions are available.

Setting the time

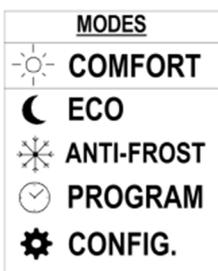

In normal operation mode touch the **MODE** button and the screen will change to show the Modes Menu. Touch the **▼** button until **CONFIG** is highlighted and touch **OK**,



Touch **▼** to select **SET HOUR/DAY** and then touch **OK**.

You can now enter the current day of the week with the **▼** and **▲** keys. Select the correct day and touch **OK**. The hours, and then the minutes can now be set

the same way. Once you touch **OK** after the minutes are set the radiator will return to the Config menu by touching **MODE**. Touch **MODE** again to return to the current operating method.

For all other functions in the **CONFIG.** menu, please refer to the main operations manual.

Operating Modes

To choose which way the radiator will run touch the **MODE** button to show the **MODES** menu. Each of the 4 modes will change the way the heater works. Use the **▼** and **▲** keys to select a continuous mode and touch **OK**.



Comfort Mode



Comfort mode is used for continuous heat between 12 and 30°C. It is typically used when you are at home and want to bring the heater on without setting a program or using manual mode. Temperatures can be adjusted directly using the **▼** and **▲** keys.

Eco -Economy Mode



Economy mode temperature is able to be set between 0.5 and 4.5°C less than the comfort temperature. Temperature settings can be adjusted directly using the **▼** and **▲** keys. Economy is used in program mode and situations where you don't need full heat (comfort mode) but require a lower level of heat to prevent the temperature falling excessively. Note: temperature adjustments made in the Comfort mode will change the Eco mode setting also however the 0.5 to 4.5°C difference will not change.

Anti-Frost Mode



Anti-Frost is factory set at 7°C and is used in the Program Mode as an off set point within a program, it is also used for long periods of absence when you want to avoid freezing in the heated zone.

ATC House,
Broomhill Drive,
Tallaght
D24 EF99
Ireland

IRL Tel: +353 (0)1 4625111
UK Tel: +44 (0)203 5649164

Email: Sales@ATC.ie

P.T.O

Program Mode



The Program mode allows you to set your own schedule according to your daily or weekly needs.

The program display is shown as two 12 hour clock faces, 00:00 to 11:59 and 12:00 to 23:59. When

programming, the display will show AM and PM for your convenience.

Each ½ hour segment of the day can be programmed to Comfort, Eco or Anti-Frost. (See Controls Section)

Edit program (when in Program Mode)

To begin editing the program touch the **OK** key, the radiator will begin with the current day if it is set, change the day to be programmed with the ▼ and ▲ and then touch **OK**.

The program then moves on to setting the heating times of the day; you can move backward and forward through the times to pick which temperature setting is required.

Using ▼ and ▲ to reach the time that you want to have the heating on, touch **MODE** to change between Comfort, Eco, or Anti-Frost.

Move forward for each ½ hour and touch **MODE** to select setting for each segment of the day. The display will change from AM to PM when appropriate.

Once the program for the day is complete touch **OK** to save and move onto the next day.

Copy program

If you want to copy a program from one day to a consecutive day, touch and hold OK when selecting the day to copy from. The Display will change from the current day to consecutive days, release the OK key when you have reached the final day you want copied to. e.g. to copy from Wednesday to Friday, touch and hold the OK button when the display shows ▼ Wednesday ▲, and release the button when ▼ Friday ▲ is reached.



Manual Mode

The Manual mode is used to Boost on or to Force the radiator off. It will override whatever setting the radiator is set to, for the length of time set when the mode is activated, to the temperature setting required or off.



5 days
15:30 h
22.5°C

To enter the Manual mode, touch the **Hand** key.

The screen will change to show the manual settings screen, similar to the one shown on the left. (Note: the values may be different to the ones shown)

The First line will be flashing and is the number of Days required for manual mode. You can set 0 if you only want the heater to operate for a few hours. Using the ▼ and ▲ keys enter the days and touch OK to move to the number of hours required (15.5 hours in the above example).

Use the ▼ and ▲ keys and enter the hours required and touch OK to save the value.

The display will now move to the temperature required, any temperature between 7 and 30°C can be set. Touching Up from 30 or Down from 7 and the radiator will show 4 lines (----) which will turn the radiator off

Touch OK to save and the screen will show Done.




Touching MODE at any time during the above will cancel the Manual mode and return the heater to the previous operating mode.

Keyboard Lock

The user can lock the keyboard on the Lifestyle heater by touching and holding the ▼ and ▲ keys for 2 seconds, unlocking is done in the same way

When the keypad is locked or unlocked, the screens below are displayed:

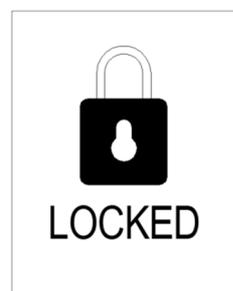

When the radiator is locked, the padlock icon will appear in the upper area of the screen. It is possible to lock the radiator in all modes, as well as standby